

INSTRUCTIONS

To replace the interior lights, follow these steps: **1** Remove the recessed mounting screws located under the specific car you are servicing, as shown in Fig. A-C. **2** Pop the roof off the car by holding each end of the car and twisting them in the opposite direction. **3** Tilt the plastic housing for the bulb(s) you want to change so you can reach the light bulb, then pull the bulb gently from its socket, like a Christmas tree light. Replace the bulb and reassemble in reverse order. You can obtain replacement bulbs directly from the M.T.H. Parts Department (phone: 410-381-2580; e-mail: parts@mth-railking.com; mail: 7020 Columbia Gateway Drive, Columbia MD 21046-1532)



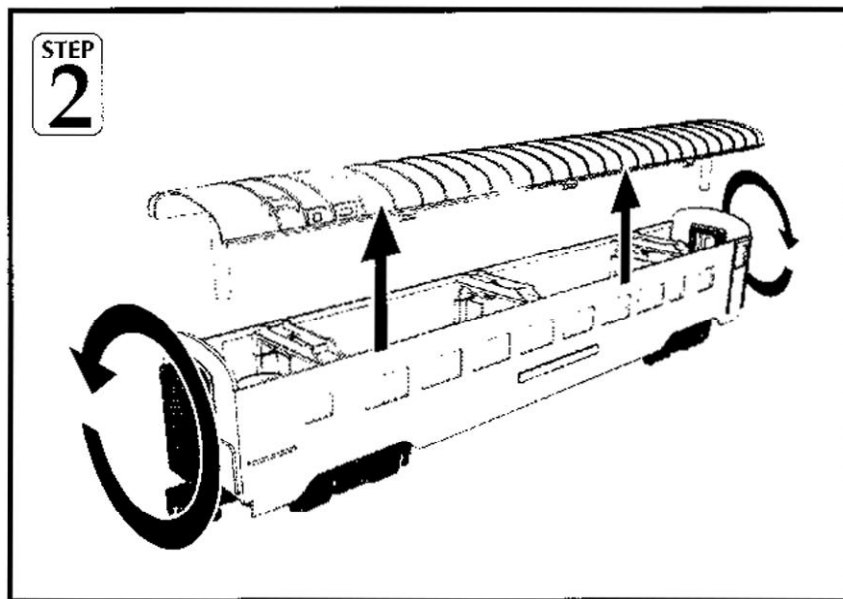


Figure A, B, C

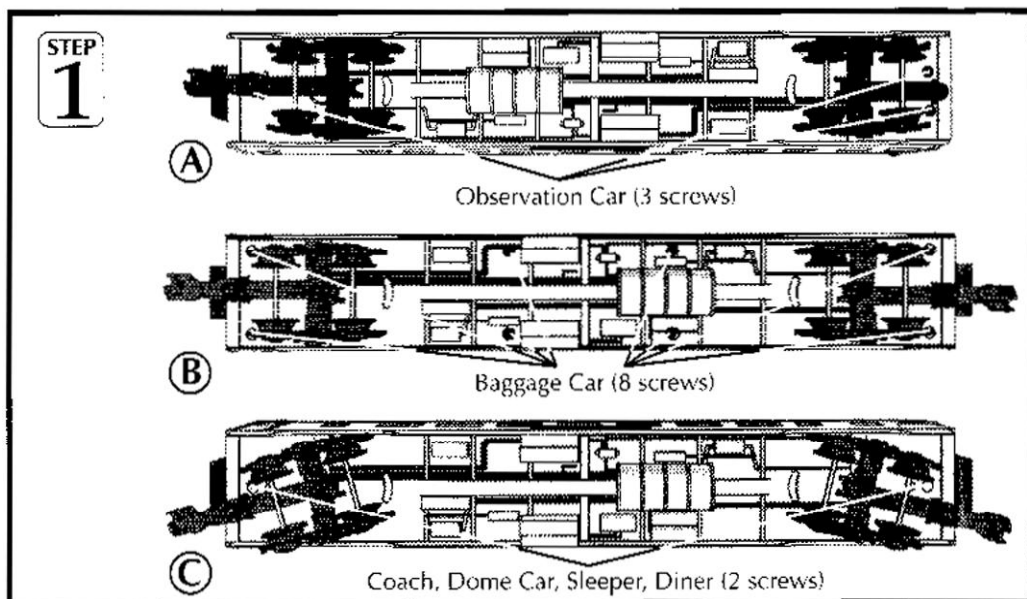

This set is delivered without a coupler on the back of the observation car. Should you choose to add the spare coupler included with the set, follow the instructions below.

- Complete steps 1 and 2 above to remove the roof from the observation car
- Remove the truck mounting screw from inside the car as shown in Figure D and pull the truck loose from the body.
- Install the coupler spring as shown in Figure E.
- Screw the coupler onto the truck. As shown in Figure F.
- Reassemble in reverse order.

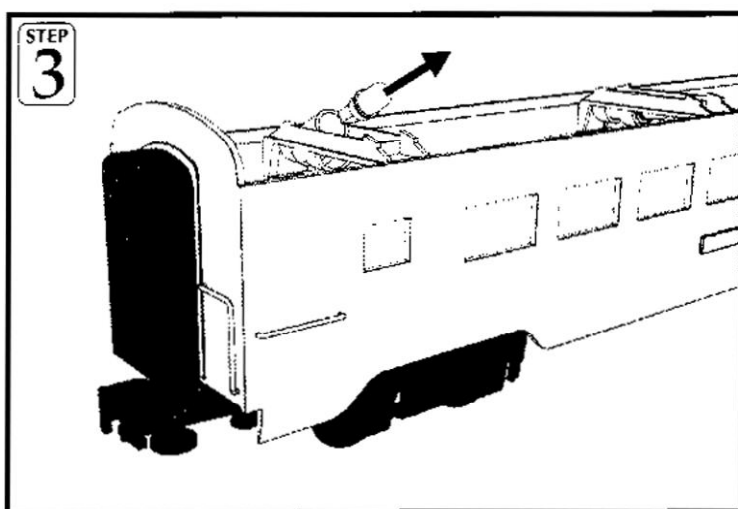