


**Set secured engine on wooden base
inside white bottom box tray.**

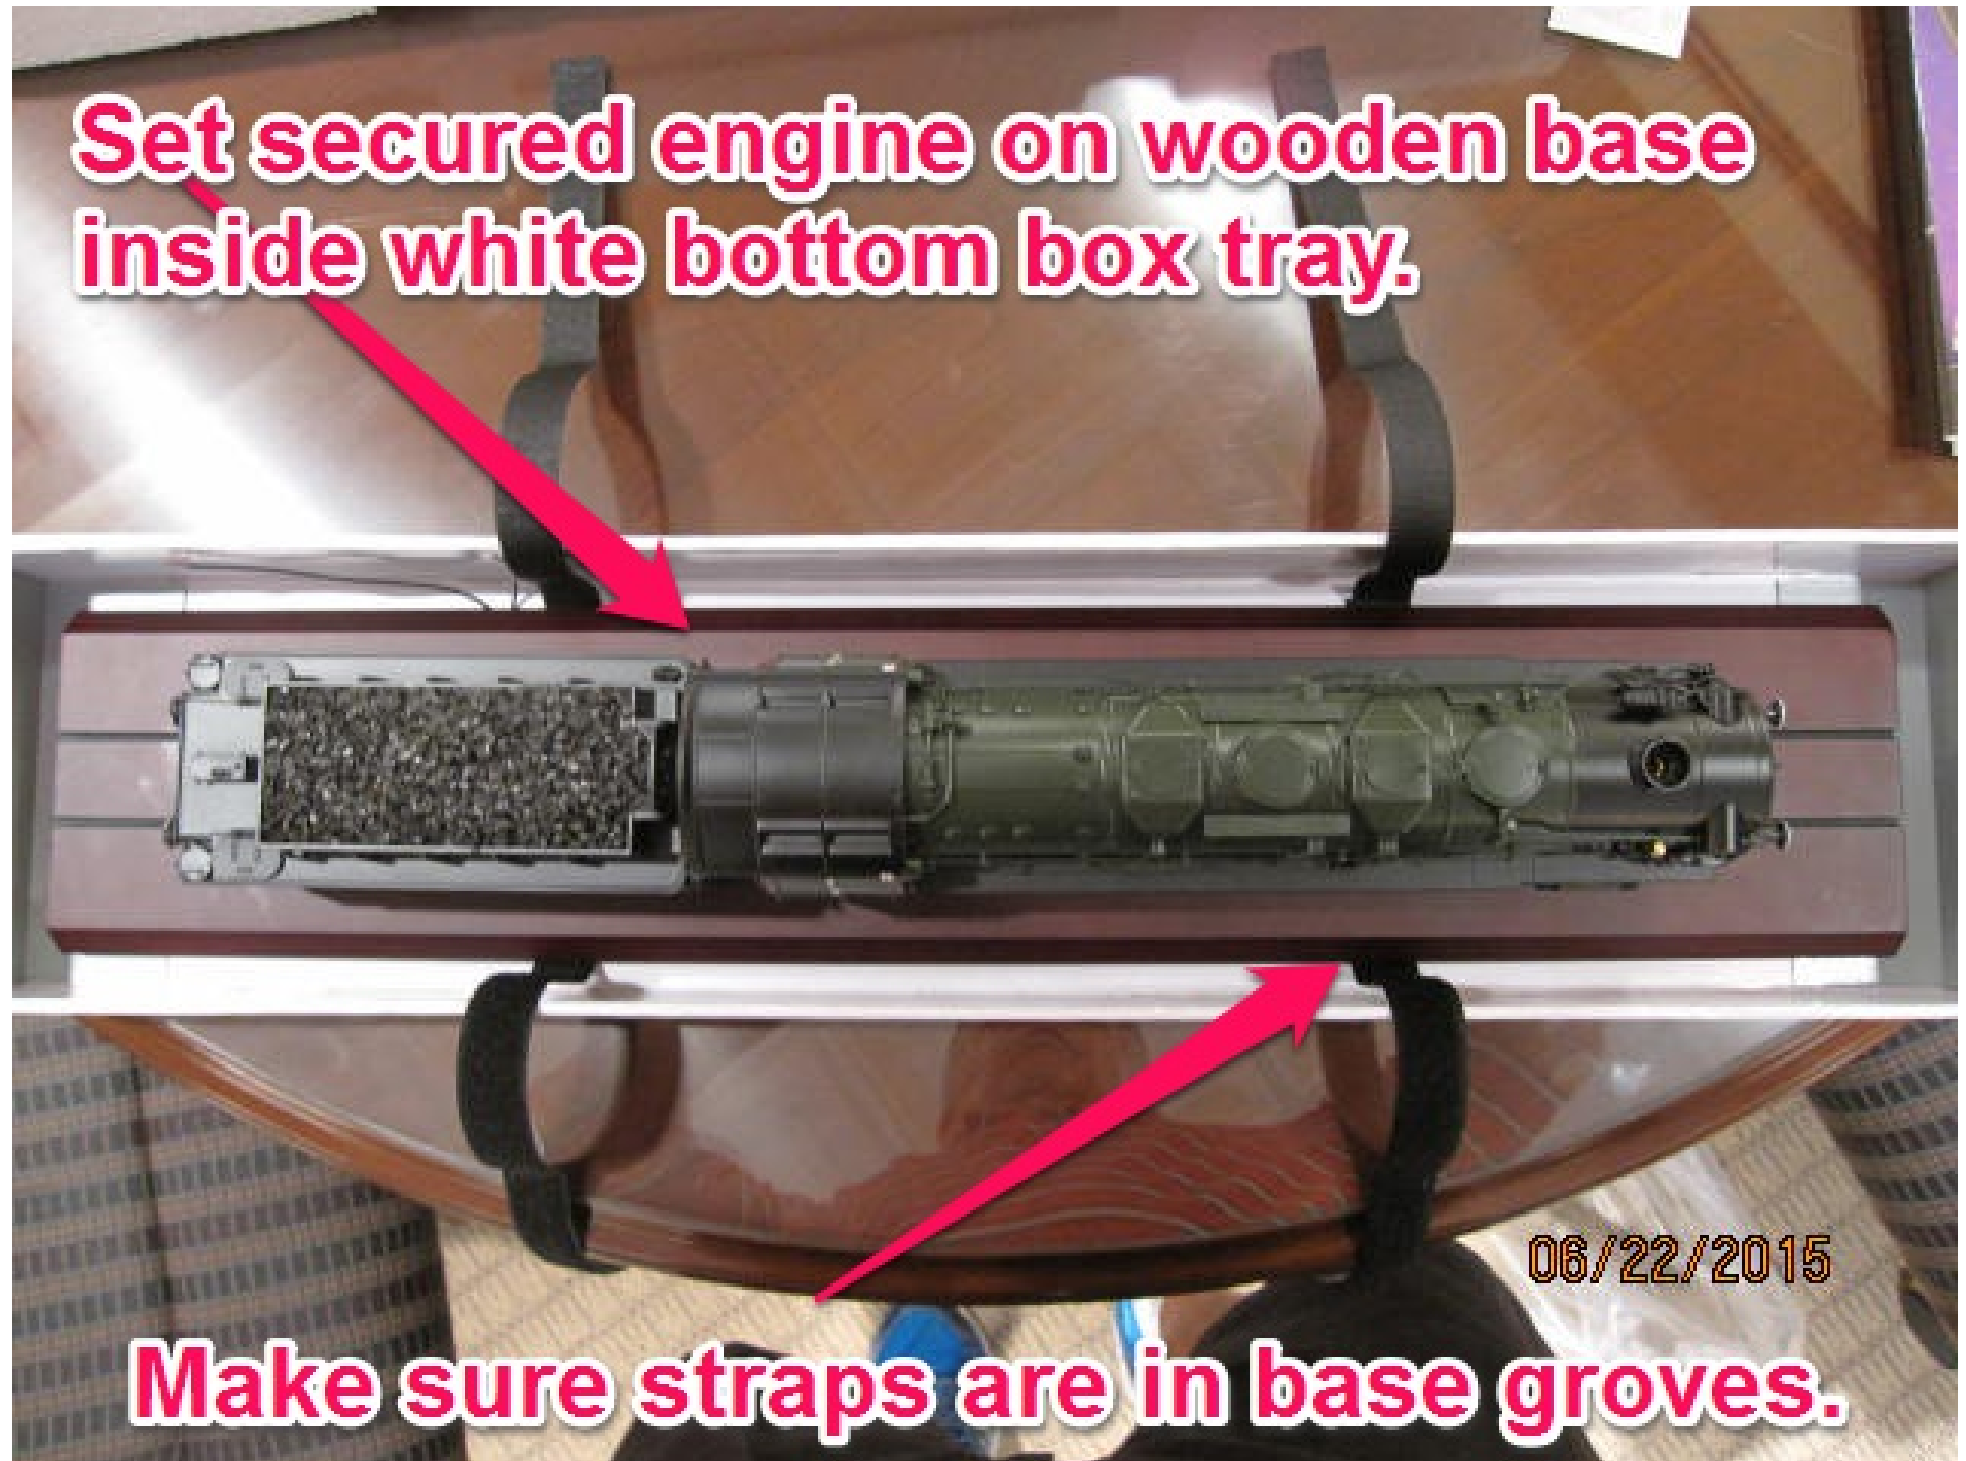

06/22/2015

Make sure straps are in base grooves.